


Replacing Your Fuel Pump By The Webmaster.


1. First you have to loosen the 2 screws holding it to the engine block. Watch out as there is a gasket that is in between the engine and the fuel pump. See the picture below.

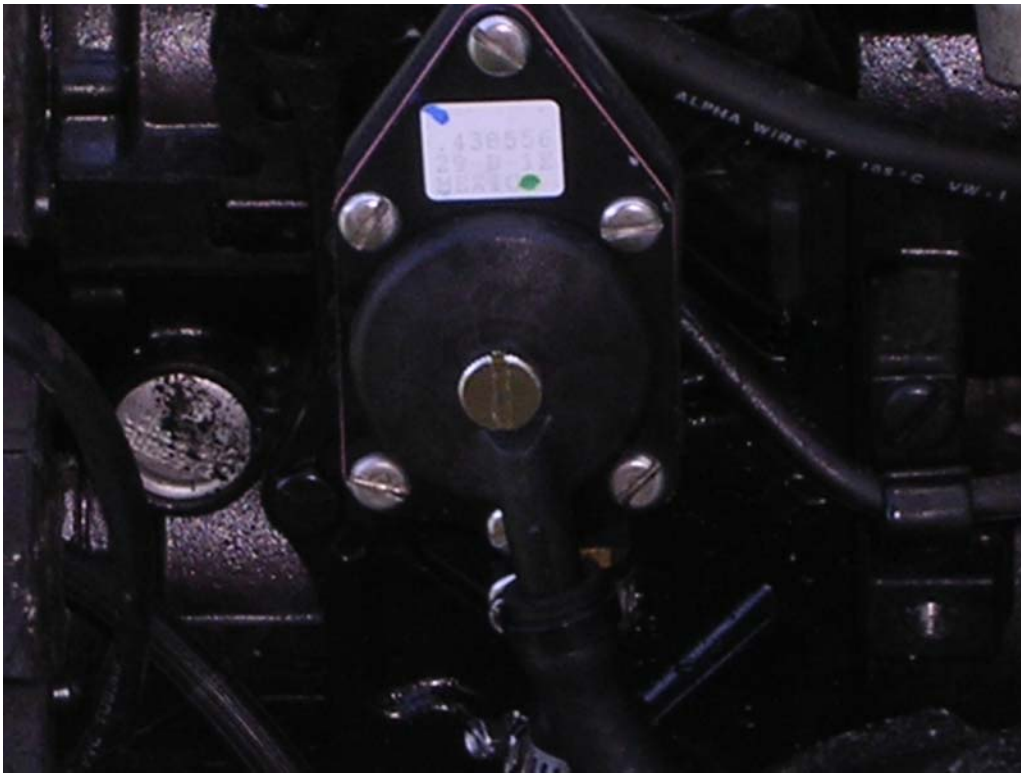

2. Second disconnect the fuel lines....be careful since some of the connections where made of plastic. I will also suggest that now would be a great time to replace the lines.
3. Third remove the remaining screws and don't do this over the water like I am!



4. Fourth you'll have to remove the gasket and install a new one... FYI this fuel pump new was \$50. with shipping. The gasket is under \$10.

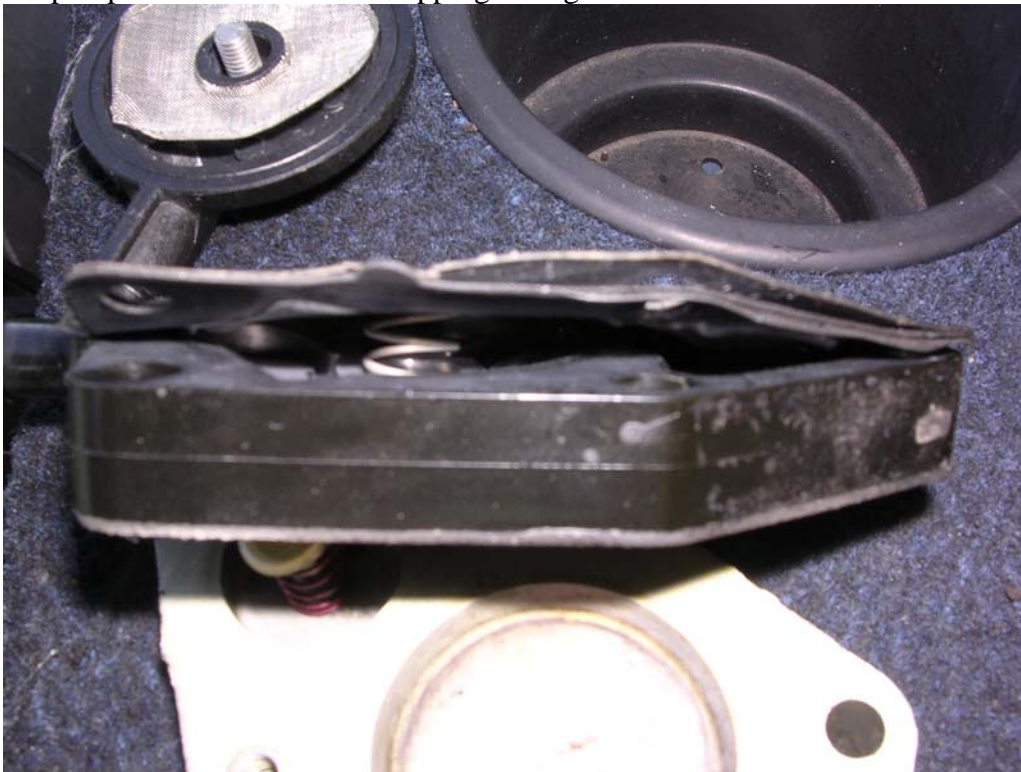

5. Also check the screen while you have the fuel pump apart.

6. Lastly, tighten ALL screws and check your fuel lines for LEAKS... I used some of those metal clamps instead on the fuel line plastic zip ties.



The above tips are just the humble opinion of the Webmaster!

www.lakethunderbird.com